


SYM86349VGA 简易说明书

1、System Board Layout



REAR IO

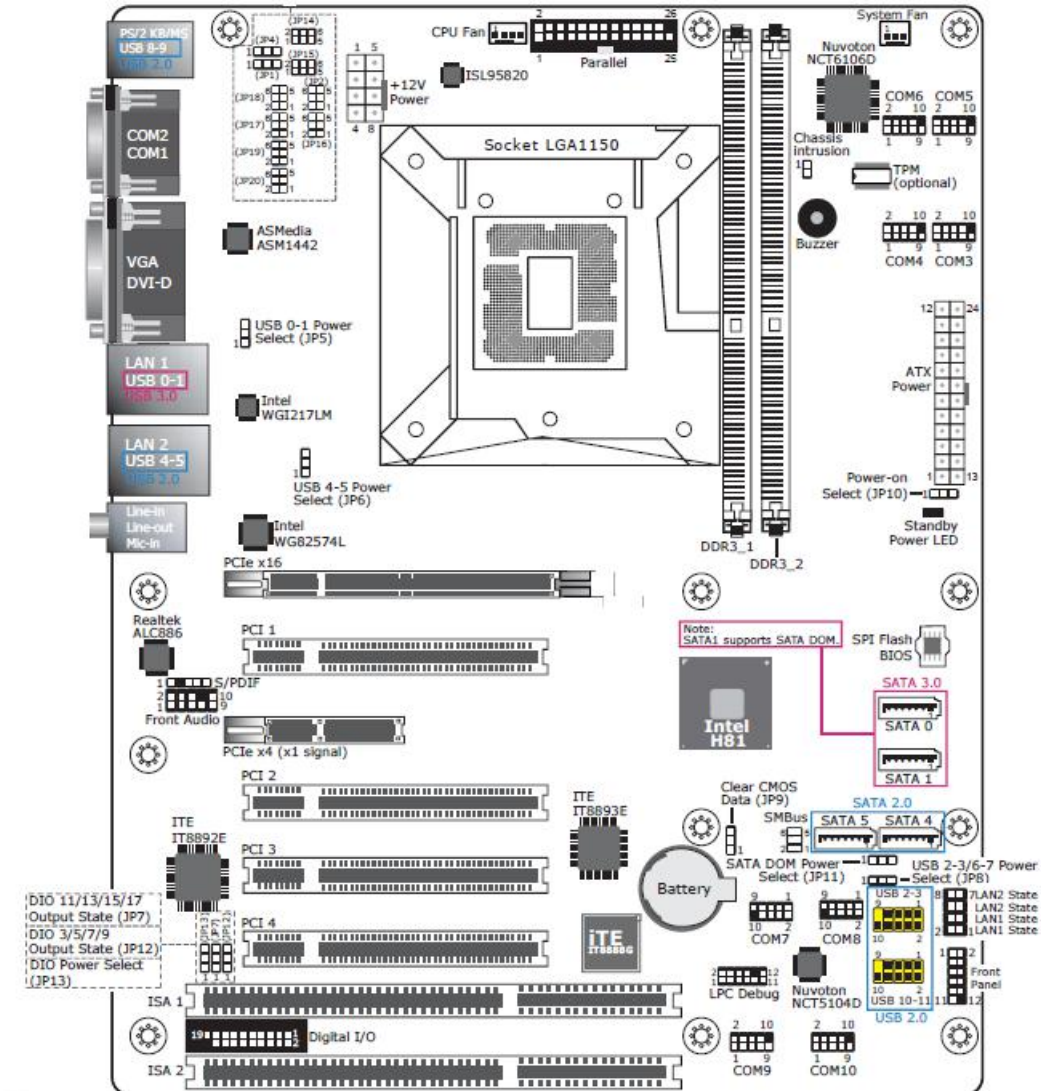

2、Connectors:

Label	Connectors
Parallel	Standard LPT ports
USB2~3~USB10~11	USB 2.0 Headers
SATA0~SATA1	Serial ATA 3.0 Header
SATA4~SATA5	Serial ATA 2.0 Header
COM3~COM10	Serial Port Header
PCI1~PCI4	Standard PCI slots
PCIeX4	Standard PCI Express x4 Slot
PCIeX16	Standard PCI Express x16 Slot
ISA	Standard ISA Slot
Front audio	Front Panel Audio Connector
CPU Fan	CPU FAN Pin Header
Digital I/O	Digital I/O Connector Pin Header
System FAN	System FAN Pin Header
ATX power	Standard ATX power Input connector
Front Panel	Front Panel Connector

3、Jumper List

Jumper	Function
JP1	PS/2 Power Select
JP2/JP16/J17/J18	COM1 RS232/422/485 Mode Select
JP4/JP5/JP6/JP8	USB Power Select
JP9	Clear CMOS Data
JP10	Power on select
JP13	Digital I/O Power Select
J14/J15	COM 1/COM 2 RS232/Power Select

4、 Front Panel Connector setting :

Pin	Define	Function	Pin	Define	Function
1	N/A	N/A	2	Power LED+	Power LED
3	HDD LED+	HDD LED	4	Power LED+	
5	HDD LED-		6	Power LED-	
7	Reset +	Reset	8	Power Button+	Power Button
9	Reset -		10	GND	
11		N/A	12	N/A	N/A

5、 Jumper Setting (JP9、 JP10):


A、 JP9: Clear CMOS Select

Jumper	status	
1-2 short	Normal	
2-3 Short	Clear CMOS data	

B、 JP10: AT/ATX Power Select

Jumper	status	
1-2 short	ATX Mode	
2-3 Short	AT Mode	

C、COM port define

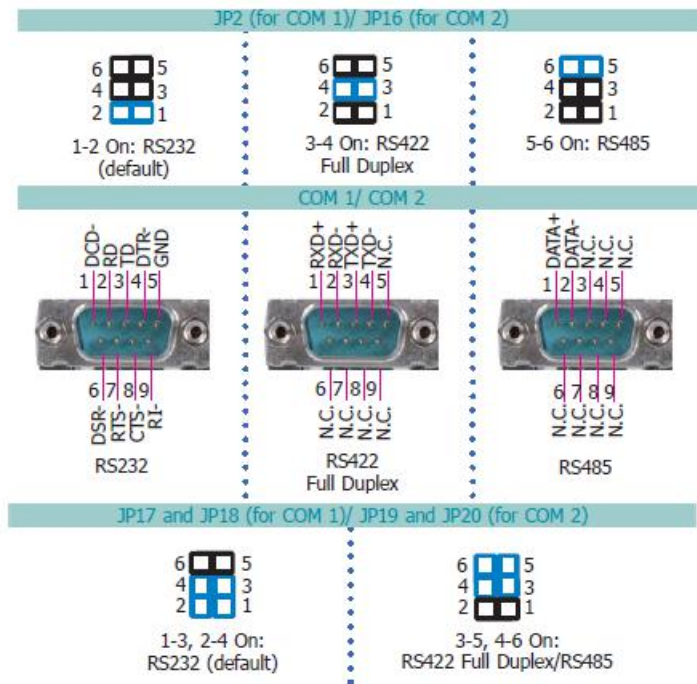

Packing list:

- SYM86349VGGA Mainboard *1pcs
- Utility CD for SYM86349VGGA *1pcs
- Installation Guide *1pcs
- USB cable *2 pcs
- SATA cable *2pcs;
- COM and LPT extension cables *4pcs
- I/O Shield *1pcs